

Operating Instructions

Description

EC3-D7x is the superheat controller with TCP/IP connection for stepper motor driven Alco Electrical Control Valves EX4...EX6 and is optimized to operate with the Copeland Digital Scroll series utilising a 0-10V input from a third party controller. The controller synchronises the PWM digital compressor solenoid valve with the superheat controlled by the electrical control valve; EX series. The EC3-D73 has the same functionality but can only be set-up via the ECD-002 display. It has no external communication functionality.

Note: This document contains short form instructions for experienced users.



Safety instructions:

- Read installation instructions thoroughly. Failure to comply can result in device failure, system damage or personal injury.
- The product is intended for use by persons having the appropriate knowledge and skills.
- Disconnect all voltages from system before installation.
- Do not operate system before all cable connections are completed.
- Comply with local electrical regulations when wiring.

Note: The EC3-D7x series contains a lead, acid gel rechargeable battery. The battery must NOT be disposed of with other commercial waste. Instead, it is the user's responsibility to pass it to a designated collection point for the safe recycling of batteries (harmonised directive 98/101/EEC). For further information contact your local environmental recycling centre.

Technical data

| | |
|--|---|
| Power supply | 24VAC ±10%; 50/60Hz; 1A |
| Power consumption | 25VA max. including EX4 ... EX6 |
| Plug-in connector | Removable screw terminals wire size 0,14 .. 1,5 mm ² |
| Grounding | 6,3 mm spade earth connector |
| Protection class | IP20 |
| COM, TCP/IP connection | RJ45 Ethernet |
| Connection to optional local ECD-002 | ECC-Nxx or CAT5 cable with RJ45 connectors |
| Digital Input; Cooling demand | 0/24VAC/DC for stop/start function. EX valve closes during stop command. Typically thermostat or third party controller. |
| Digital Input; Comp2 running | 0/24VAC/DC typically connected to auxiliary connection. EX valve control loop remains active when input is 24V and the digital scroll is idle. |
| NTC input; Coil-out temperature sensor | Emerson temperature sensor ECN-N60 or ECN-P60 |
| 4-20 mA Analog input | Emerson PT4-07S / PT4-18S / PT4-30S |
| 4-20 mA Analog output | For connection to any 3 rd party controller with 12/24VDC power supply and appropriate burden |
| Output alarm relay (If L2 = 1) | Activated: SPDT contact 24V AC/DC, 2 Amp inductive load Deactivated: During normal operation (no alarm condition) During alarm condition or power supply is OFF |
| Output pump down relay (If L2 = 1) | Activated: During normal operation Deactivated: All other conditions |
| Output Digital Scroll t Triac | 24V or 230V AC output to activate PWM valve on Digital Scroll |
| Stepper motor output for EX4...EX6 | Maximum current 0.6A with nominal 24VDC operating voltage |

Mounting

The EC3-D7x is designed to be mounted onto a standard DIN rail.

Electrical installation

- Refer to the electrical wiring diagram for electrical connections.
- Do not apply voltage to the controller before completion of wiring.
- Ground the metal housing with a 6.3mm spade connector.
- **Important:** Keep controller and sensor wiring well separated from mains wiring. Minimum recommended distance 30mm.

Warning: Use a class II category transformer for 24VAC power supply. Do not ground the 24VAC lines. We recommend using individual transformers for EC3 EC3-D72_65141_EN_R01.doc Replacement for


controller and for 3rd party controllers to avoid possible interference or grounding problems in the power supply. Connecting any EC3 inputs to mains voltage will permanently damage the EC3.

Digital input status is dependant to operation of compressor/0-10V input

| System Operating condition | Digital Inputs | 0-10V input from third party controller |
|---|--|---|
| Comp. 1 & Comp.2 in stop mode | “Cooling demand” open (0V) “Comp 2 Running” open (0V) | ECV remains closed irrespective of voltage input value |
| Comp. 1 in run & Comp.2 in stop mode) | “Cooling demand” closed (24V) / “Comp 2 Running” open (0V) | ECV active Input =0V: digital valve capacity at 10% default capacity. When the digital comp. is in by-pass the ECV will: Close when capacity is <70% Be inhibited when the capacity is >70% |
| Comp 1 & Comp. 2 in run mode | “Cooling demand” closed (24V) / “Comp 2 Running” closed (24V) | ECV active The ECV will always modulate even when the digital compressor is in by-pass mode. |
| Comp.1 in stop and Comp. 2 in run mode starts | “Cooling demand” open (0V) / “Comp 2 Running” closed (24V) | ECV remains closed irrespective of voltage input value |

Digital comp. should always be regarded as base load; compressor 1

Wiring

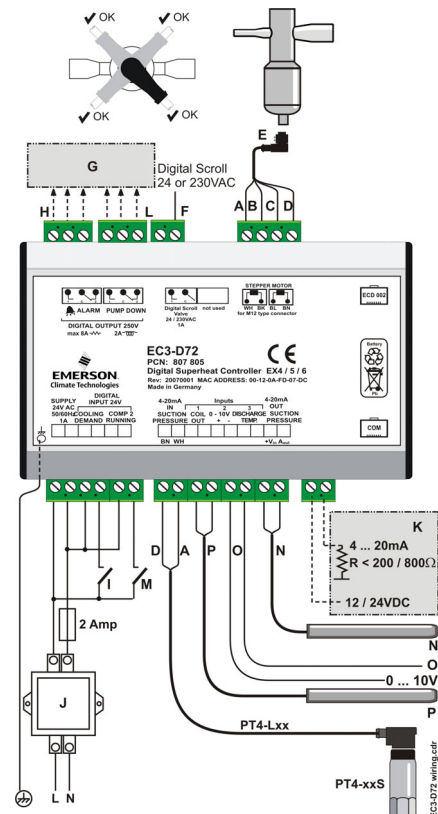

- A: White wire
- B: Black wire
- C: Blue wire
- D: Brown wire
- E: M12 Plug cable assembly EX5-Nxx for connection to EX4/EX5/EX6
- F: 24V/230V Triac output to PWM Digital Scroll valve
- G: Remote control panel, system controller
- H: Alarm relay, dry contact. Relay coil is not energised at Alarm or power off
- I: Digital input 1: “Cooling demand” (Digital compressor run: (0V/open = Stop; 24V/closed = Control Start;))
- J: Transformer Class II, 24VAC secondary / 25VA min. Model ECT-323
- K: Third party controller (can use the suction pressure (4-20mA) analog output signal from EC3)
- L: Pump down relay, dry contact. Relay is energized during normal operation.
- M: Digital input 2: “Comp. 2 running” (0V/open = Comp2 stop; 24V/closed = Comp2 running)
- N: Discharge Temp. Sensor
- O: 0-10V Digital Scroll capacity demand signal from system controller
- P: ECN-N60 Coil out sensor

Preparation for Start-up:

- Vacuum the entire refrigeration circuit.
- Warning:** Alco Electrical Control Valves EX4...EX6 are delivered at half open position. Do not charge system before closure of valve.
- Apply supply voltage 24V to EC3 while the cooling demand digital input is 0V (open). The valve will be driven to close position.
- After closure of valve, start to charge the system with refrigerant.

Possibilities of connecting EC3-D72 to a network or PC

A **TCP/IP Controller Readme** file is available on the www.emersonclimate.com/europe website to provide detailed information about TCP/IP Ethernet connectivity. Please refer to this file if you need information beyond the contents of this instruction sheet.

- 1) Connect the EC3-D72 using the optional ECC-Nxx cable assembly or a standard CAT5 network cable with RJ45 plugs assembly to a network or router that enables the controller to receive a dynamic TCP/IP address or
- 2) Connect the EC3-D72 to a computer using a crossover cable plugged directly into the Ethernet port. In this case, the TCP/IP address of the computer must be manually modified to be compatible with the default address of the controller. Refer to the TCP/IP Controller-Readme file for more details.

Setting and visualising Data: WebPages (recommended method)

Important: Make sure that cooling demand input is 0V (open). Turn the power supply ON.

Four parameters i.e. refrigerant type (u0), pressure sensor type (uP), valve type (ut) and control mode can be set only when cooling demand digital input is open (0V) and the power supply is ON (24V). This feature is for added safety to prevent accidental damage of compressors and other system components. All other parameters can be modified at any time.


The EC3-D72 has a TCP/IP Ethernet communication interface enabling the controller to be directly connected to a network or a PC via the standard Ethernet port. The EC3-D72 controller has embedded WebPages to enable the user to visualise the parameter lists using real text labels.

To view WebPages on the PC, a standard WebBrowser like Internet Explorer® or Mozilla Firefox and JRE Java Runtime Environment is needed. JRE can be downloaded at no charge from the www.java.com website.

Open the Internet browser program on the computer and, if EC3-D72 is connected directly to PC with a crossover cable enter the default TCP/IP address of the controller (**192.168.1.101**) into the address line, or the dynamic address from the DHCP server from network/Router. Refer to the TCP/IP Controller-Readme file if a specific port is required.

It is possible to identify the dynamic TCP/IP address assigned by DHCP of the Router or network, refer to the TCP/IP Controller-Readme file.

After a few moments, the default monitoring page should be displayed. If the browser does not open the default page or display active data, the user should check the Internet browser "Option" configuration. Refer to the TCP/IP Controller-Readme file.

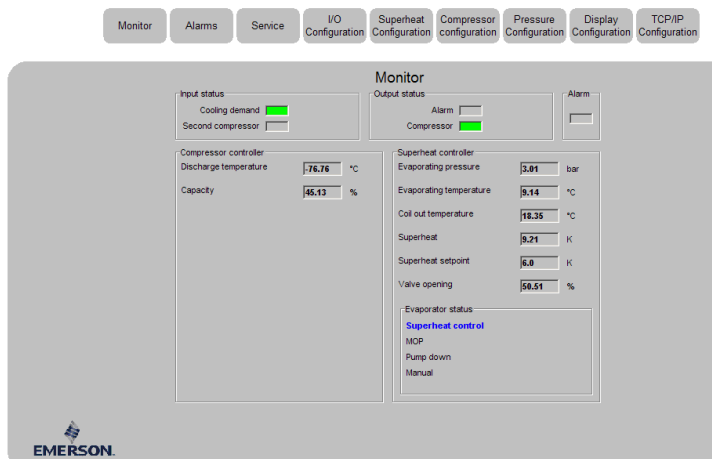

The Monitoring and Alarm WebPages are read only and therefore it is not necessary to enter a username or password. A username and password will be requested upon the initial request to any of the other WebPages. The factory default settings are :

Username: "EmersonID", Password: "12"

The default settings may be modified on the Display configuration page.

Press the tabs at the top of the Monitoring page with a left click of the mouse button to enter the respective Webpage.

The parameters will be visualised in real text together with the program code as defined in the parameter list below.

After the parameters have been modified, the complete list of settings can be saved to the memory of the computer and used later to upload into another controller. This can save a considerable amount of time when using multiple controllers and over a period of time, a library can be created containing the parameter lists for equipment for different applications.

It is also possible to display live graphical data from the controller. Superheat, evaporating pressure, coil-out temperature and evaporating temperature are available on a 10 minutes rolling chart. Refer to the TCP/IP Controller-Readme file for a complete description of the features available for the TCP/IP series of controllers.

Alternative procedure for parameter modification using ECD-002

Note: Some of the functions/parameters (manual control and TCP/IP configuration) cannot be modified when using ECD-002 comparing to a set-up by PC via TCP/IP. **Warning:** All alarms are disabled during manual control. We do not recommend unattended operation of system during manual control.

The parameters can be accessed via the 4-button keypad. The configuration parameters are protected by a numerical password. The default password is "12".

To select the parameter configuration:

- Press the **PRG** button for more than 5 seconds
A flashing 0 is displayed
- Press **▲** or **▼** until the password is displayed (default 12).
If the password was changed, select the new password
- Press **SEL** to confirm password
- Press **▲** or **▼** to show the code of the parameter that has to be changed;
- Press **SEL** to display the selected parameter value;
- Press **▲** or **▼** to increase or decrease the value;
- Press **SEL** to temporarily confirm the new value and display its code;

Repeat the procedure from the beginning "press **▲** or **▼** to show..."

To exit and save the new settings:

Press **PRG** to confirm the new values and exit the parameters modification procedure.

To exit without modifying any parameters:


Do not press any button for at least 60 seconds (TIME OUT).

Special Functions:

The Special Functions can be activated by:

- Press **▲** and **▼** together for more than 5 seconds.
A flashing 0 is displayed.
- Press **▲** or **▼** until the password is displayed (default = 12).
If password was changed, select the new password.
- Press **SEL** to confirm password
A 0 is displayed and the Special Function mode is activated.
- Press **▲** or **▼** to select the function. The number of special functions is dynamic and controller dependent. See list below.
 - 0: Reset controller to factory settings (this action is possible only when digital input is 0V i.e. open)
 - 1: Displays the current TCP/IP address
 - 2: Assign temporary 192.168.1.101 as TCP/IP address if EC3-D72 has different address
- Press **SEL** to activate the function without leaving the special function mode.
- Press **PRG** to activate the function and leave the special function mode.

ECD-002 display/keypad unit (LEDs and button functions)

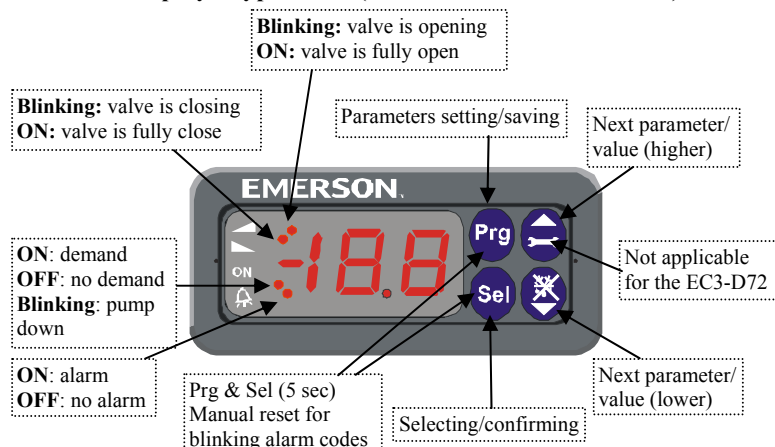


List of parameters in scrolling sequence by pressing button

| Code | Parameter description and choices | Min | Max | Factory setting | Field setting |
|------|---|----------|----------|-----------------|---------------|
| H5 | Password | 1 | 199 | 12 | |
| u0 | System refrigerant 0 = R22; 1 = R134a; 2 = R507; 3 = R404A; 4 = R407C; 5 = R410A; 6 = R124; 7 = R744 (subcritical application) | 0 | 7 | 4 | |
| uP | Installed pressure sensor type 0 = PT4-07S (for R22/R134a/R507/R404A/R407C/R124) 1 = PT4-18S (for R410A) 2 = PT4-30S (for R744, subcritical) | 0 | 2 | 0 | |
| ut | Installed valve type 1 = EX4; 2 = EX5; 3 = EX6 | 1 | 3 | 2 | |
| uu | Start valve opening (%) | 10 | 100 | 50 | |
| u9 | Start opening duration (second) | 1 | 30 | 5 | |
| uL | Low superheat alarm function 0 = disable (for flooded evaporator) 1 = enable auto reset 2 = enable manual reset Cut-out at 0.5K (if it maintains 1 min.); Cut-in immediately at 3K | 0 | 2 | 1 | |
| u5 | Superheat set-point (K) If uL enabled (auto or manual) If uL disabled | 3 0.5 | 30 30 | 6 6 | |
| u2 | MOP function 0 = disable 1 = enable | 0 | 1 | 1 | |
| u3 | MOP set-point (°C) saturation temperature Factory setting is according to selected refrigerant (u0): +13°C for R22 +15°C for R134a +7°C for R507 +7°C for R404A +15°C for R407C +15°C for R410A +50°C for R124 -5°C for R744 | * | * | X | |
| r5 | Units conversion 0 = °C, K, bar 1 = °F, R, psig (Psig values are divided by 10. Example: Display 12.5 is 125 psig) | 0 | 1 | 0 | |
| r1 | Value to show 0 = Measured superheat (K) 1 = Measured evaporator pressure (bar) 2 = Valve opening (%) 3 = Measured coil-out temp. (°C) 4 = Calculated evaporating temperature (°C) from the pressure 5 = Compressor capacity in % | 0 | 4 | 0 | |
| u4 | Superheat control mode 0 = Standard, 1 = Slow | 0 | 1 | 0 | |
| uH | High superheat alarm function 0 = disable, 1 = enable auto reset | 0 | 1 | 0 | |
| uA | High superheat alarm setpoint | 16 | 40 | 30 | |
| ud | High superheat alarm delay, min. | 1 | 15 | 3 | |
| P2 | Freeze protection cut-out, °C | -40 | 40 | 0 | |
| P3 | Freeze protection cut-in, °C | -37 | 43 | 3 | |
| P4 | Freeze protection alarm function 0 = disable, 1 = enable auto-reset, 2 = enable manual reset | 0 | 2 | 0 | |
| P5 | Freeze protection alarm delay, sec. | 5 | 199 | 30 | |
| P6 | Pump-down function 0 = disable, 1 = enable auto-reset | 0 | 1 | 0 | |
| P7 | Pump-down cut-out, barg | -0,5 | 18 | 0.5 | |
| P8 | Pump-down time delay, sec. | 0 | 199 | 30 | |
| P9 | Low pressure alarm function 0 = disable, 1 = enable auto-reset, 2 = enable manual reset | 0 | 2 | 0 | |
| PA | Low pressure alarm cut-out, barg | -0,8 | 17,7 | 0 | |
| Pb | Low pressure alarm delay, sec. | 5 | 199 | 5 | |
| Pd | Low pressure alarm cut-in, barg | -0,5 | 18 | 0.3 | |

| Code | Parameter description and choices | Min | Max | Factory settings | Field settings |
|------|--|-----|-----|------------------|--|
| L2 | Output logic 0: Alarm = normal, pump down. = normal 1: Alarm = inverse, pump down. = normal 2: Alarm = normal, pump down. = inverse 3: Alarm = inverse, pump down. = inverse | 0 | 3 | 1 | |
| b1 | Battery error management, when battery is defective, see below: | 0 | 3 | 2 | |
| | value Alarm display Alarm relay Valve | | | | Reset possibility after recovery/replacement |
| | 0 - - Regulating | | | | - |
| | 1 Ab - Regulating | | | | - |
| | 2 Ab Signalling Fully close | | | | Auto |
| | 3 Ab (blinking) Signalling Fully close | | | | Manual |
| /6 | Show decimal point; 0=yes, 1 = no | 0 | 1 | 0 | |
| A6 | Maximum discharge temperature; °C | 100 | 140 | 130 | |
| A7 | Discharge temp. alarm delay; sec. | 0 | 199 | 30 | |
| F2 | Minimum capacity; % | 10 | 100 | 10 | |
| F3 | Maximum capacity; % | 10 | 100 | 100 | |
| F6 | Scroll Valve, PWM cycle time; sec. | 10 | 20 | 20 | |
| t3 | Monitor discharge temperature sensor 0 = no, 1 = Yes | 0 | 1 | 0 | |
| ru | 0-10V input filtering; 0 = off, 1 = on | 0 | 1 | | |

*) Min. and Max. setting values are dependant to selected type of refrigerant.

Control (valve) start-up behaviour (Parameter uu and u9)

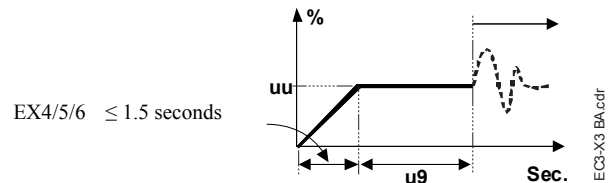

Pump down function (if P6=1 and L2=1)

| Cooling demand status | Alarm condition | Pump down relay |
|-----------------------|-----------------|---|
| 24V (ON) | NO | Activate |
| 0V (OFF) | NO | Deactivate when pressure drops below P7 and after elapsed time P8 |
| 0V or 24V | YES | Deactivate instantaneously |


Start-up

Start the system and check the superheat and operating conditions. The EC3-D72 is fully functional without connected PC or keypad/display unit. ECD-002.

Mounting of ECD-002

ECD-002 can be installed at any time also during operation.

- ECD-002 can be mounted in panels with 71x29 mm cutout
- Push controller into panel cut-out.(1)
- Make sure that mounting lugs are flush with outside of controller housing
- Insert Allen key into front panel holes and turn clockwise. Mounting lugs will turn and gradually move towards panel (2)
- Turn Allen key until mounting lug barely touches panel. Then move other mounting lug to the same position (3)
- Tighten both sides very carefully until keypad is secured. Do not over tighten as mounting lugs will break easily.

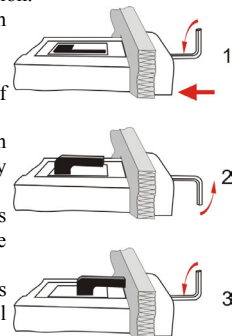

Error/Alarm handling

| Alarm code | Description | Related parameter | Alarm relay | Valve | What to do? | Requires manual reset after resolving alarm |
|------------|---------------------------------------|-------------------|-------------|-------------|--|---|
| E0 | Pressure transmitter error | - | Signalling | Fully close | Check wiring connection and measure the signal 4 to 20 mA | No |
| E1 | Coil-out temperature sensor error | - | Signalling | Fully close | Check wiring connection and measure the resistance of sensor 10,000ohms @ 25°C | No |
| E3 | Discharge temp. sensor error | - | Signalling | Regulating | Check wiring connections and measure the resistance of the sensor. Also check the status of the I/O configuration (t3) | |
| AII | EX4...EX6 electrical connection error | - | Signalling | - | Check wiring connection and measure the resistance of winding Refer to EX series datasheet: EX58e35008 | No |

| Alarm code | Description | Related parameter | Alarm relay | Valve | What to do? | Requires manual reset after resolving alarm |
|--------------------|---------------------------------------|--------------------|-------------|-------------------------------------|---|---|
| <i>Ab</i> | Battery error | b1: 1 | - | Regulating | Battery potentially does not have enough charge to close valve in case of main power supply interruption. May occur temporarily with new controllers or after long storage but should disappear when battery is charged sufficiently (allow 10hrs). If Ab remains active even when battery is charged, battery may be defective and should be replaced. (Replacement kit: 807 790). | - |
| <i>Ab</i> | | b1: 2 | Signalling | Fully close | | - |
| <i>Ab blinking</i> | | b1: 3 | Signalling | Fully close | | Yes |
| <i>AE blinking</i> | Pump down action can not accomplished | P6: 1 | Signalling | Already closed by Pumpdown command | Allocate the source, which does not let suction pressure drops below desired set-point | Yes |
| <i>AF</i> | Freeze protection | P4: 1 | Signalling | Fully close Pumpdown deactivated | Check the system for cause of low pressure such as insufficient load on evaporator | No |
| <i>AF blinking</i> | | P4: 2 | | | | Yes |
| <i>AL</i> | Low superheat (<0,5K) | uL: 1 | Signalling | Fully close Pumpdown deactivated | Check wiring connection and operation of valve | No |
| <i>AL blinking</i> | | uL: 2 | | | | Yes |
| <i>AH</i> | High superheat | uH: 1 | Signalling | Fully close Pumpdown deactivated | Check the system | No |
| <i>AP</i> | Low pressure | P9: 1 | Signalling | Fully close Pumpdown deactivated | Check the system for cause of low pressure such as refrigerant loss | No |
| <i>AP blinking</i> | | P9: 2 | | | | Yes |
| <i>dA</i> | High discharge temp. | A6: alarm setpoint | Signalling | Fully close Pumpdown deactivated | Check the system | No Fixed differential = 10°C |
| <i>Er</i> | Data error display – out of range | - | - | - | Data send to the display is out of range. Check temperature and pressure sensor. | No |

Note: When multiple alarms occur, the highest priority alarm is displayed until being cleared, then the next highest alarm is displayed until all alarms are cleared. Only then will parameters be shown again.

Message

--- No data to display

The display will show an “---” at start up and when no data is send to ECD-002

Checking system operating conditions using local display/keypad ECD-002


The data to be permanently shown on the display can be selected by the user (parameter ρ 1). It is possible to temporarily display these values. However this function is not available in an alarm condition. The display will show for one

second the numerical identifier of the data (see ρ 1 parameter) and then the selected data. After 5 minutes, the display will return to the value selected by parameter ρ 1.

Service / Troubleshooting

| Symptom | Cause | Action |
|--|---|--|
| Operating superheat is several degrees higher or lower than set-point | Incorrect signal from pressure or temperature sensors | 1- Check the sensors 2- Make sure ECN-N60 temperature sensor is used 3- For optimum accuracy, please use: PT4-07S for R22/R134a/R507/R404A/R407C/R124 PT4-18S for R410A PT4-30S for R744 4- Make sure the sensor cables are not installed along with other high voltage cables |
| Operating superheat is too low i.e. compressor wet running | 1- Incorrect wiring of ECV 2- Defective sensors | 1- Check the wiring 2- Check the sensor |
| Valve is not fully closed | 1- The cooling demand digital input is ON (24V) 2- Wrong ECV selected. | 1- Valve is shut off only when the digital input is turned off (0V) 2- Check the setting of parameter ut |
| Unstable superheat (hunting) | Evaporator is designed to operate at higher superheat | Increase the superheat set-point to a higher value; if system is stable, start to decreasing gradually checking each time for a stable control |
| Valve opens when EC3 commands to close and vice versa | Wrong wiring between EC3-D72 and valve | Check the wiring and obey the colour coding: white/black, blue/brown. |
| Superheat set-point is shifting after several months of uninterrupted operation or permanent jumper of 24V digital input | Stepper motor driven valves require synchronization | Do not apply permanent 24V digital input. Interrupt digital input once every week for 5 seconds if compressor never stops. This has the effect of referencing the valve to the fully closed position. |

Dimensions EC3-D72/D73

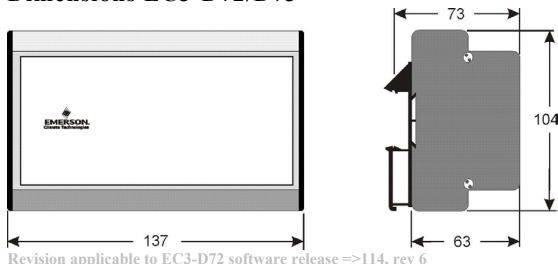

Revision applicable to EC3-D72 software release =>114, rev 6

ECD-002

